

Audio Driver Installation Guide

Version: V1.85 Update: 20090922

Trademarks

Some of the product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Revision History:

| Version | Date | Description |
|---------|-----------|-------------|
| V1.85 | Aug. 2009 | Release |

Remark:

The below installation procedure is based on the version v1.85 and using Windows XP as an example, the installation procedure might slightly differ depending on the OS installed.

Driver Installation Procedure

Insert the Driver CD into your CD driver which is prior connected to the system then follow the installation instructions in the Setup Wizard.

Detail instruction as below:

1. You can find the drivers menu in the attached driver CD, please click the <Win2K,XP, 2003> in the <Audio> section. The procedure might slightly differ depending on the OS version installed.

Driver list

| Model name (Motherboard) | Function | OS | Note |
|--------------------------|--|---|---|
| | Chipset | Windows |  Installation Guide |
| | Intel SATA AHCI | Windows driver |  User manual |
| | | Win2K, XP |  Installation Guide |
| | VGA | Win2K, XP | IEGD driver |
| | | Vista | Use for CRT output only |
| | | Linux | |
| | Audio | Win2K, XP, 2003 |  Installation Guide |
| | <ul style="list-style-type: none"> • Realtek HD Codec | Vista | |
| | | Linux | |
| | Windows XP update | Dual Core CPU | |
| | | Chipset | |
| | Touch Screen auto detect / install program. Use for: <ul style="list-style-type: none"> • ELO • POS Touch • POS Touch-HID • POS Touch+ | Windows | Read Me |
| | Touch Screen <ul style="list-style-type: none"> • ELO Touch | DOS | |
| | | Windows | v463 |
| | | Windows/Alpha |  Installation Guide |
| | | Linux | v481 (alpha driver) |
| | Touch Screen <ul style="list-style-type: none"> • POSTouch | DOS | |
| | | Windows |  Installation Guide |
| | | Linux | |
| | PCI-E 1000Mb LAN <ul style="list-style-type: none"> • Realtek RTL8111 | DOS | |
| | | Win9X, ME, 2K, XP |  Installation Guide |
| | | Vista | |
| | | Linux | |
| | Mini PCI-E IEEE802.11b/g/n Wireless LAN <ul style="list-style-type: none"> • WS32L • WS33N | Win2K, XP | |
| | | Vista | |
| | | WinXP 64bit | |
| | | Vista 64bit | |
| | BIOS flash utility | DOS | |
| | Hardware Monitor | Windows | |
| | Watch Dog Timer (WDT) demo tool | DOS | With C language source code |
| | | Windows | With VB language source code |
| | | Programming guide | |
| | Cash Drawer controller test utility (use I/O port 0x48C) | DOS | With C language source code |
| | Finger Print Module <ul style="list-style-type: none"> • U4500 | SDK for Windows and Linux | |
| | | Demo and Test program (Windows) |  Installation and User Guide |
| | Magnetic Card Reader <ul style="list-style-type: none"> • S64 series | Windows | Utility |
| | Magnetic Card Reader <ul style="list-style-type: none"> • IDMB series | Windows | Utility |
| | P07303 series 20*2 VFD Customer Display <ul style="list-style-type: none"> • Demo tool | DOS |  User's manual V1.7 |
| | P07303 series 20*2 VFD Customer Display <ul style="list-style-type: none"> • USB driver | Win98, ME, 2K, XP, 2003 | |
| | | Vista | |
| | | Linux | |


2. Double click on the folder <v1.85>.



3. Double click to run <WDM_R185.exe> to run the InstallShield Wizard.



4. Files are extracting.

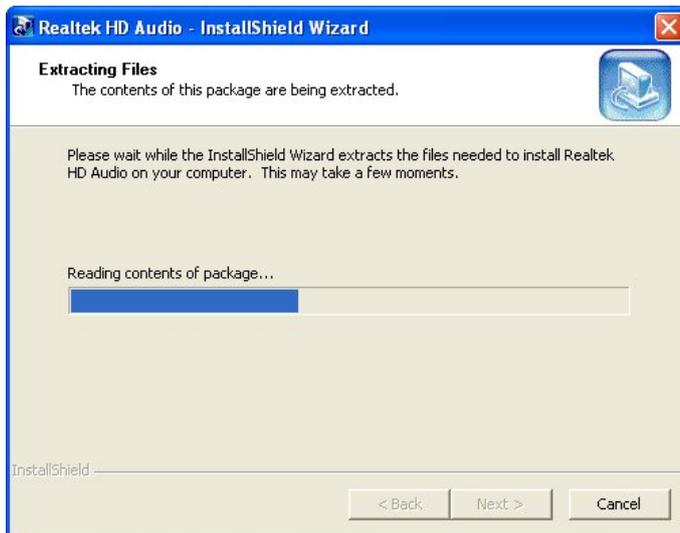

5. Click <Next> to start the InstallShield Wizard Setup Program.



6. Setup program is running.



7. Select <Yes, I want to restart this computer now>, then click <Finish>.

